



## 7007 Heavy Duty Air Riveter

### Maintenance & Adding oil for Air/Hydraulic Riveter

1. Disconnect air hose.
2. Use the spanner to take apart the head as fig 1.
3. Use the spanner to open the bottom cover as fig. 2.
4. Remove the piston of the cylinder as fig. 3.

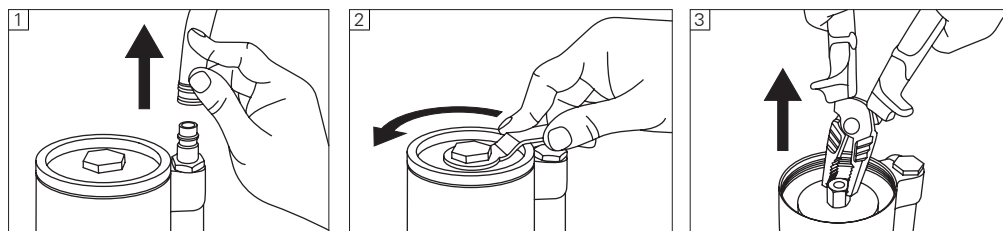


5. Clean the inside of the cylinder and the frame body.
6. Full the lubricate oil as fig. 4.
7. Clean the stem of piston, apply grease to the inner wall of cylinder and the O-ring as fig 5.

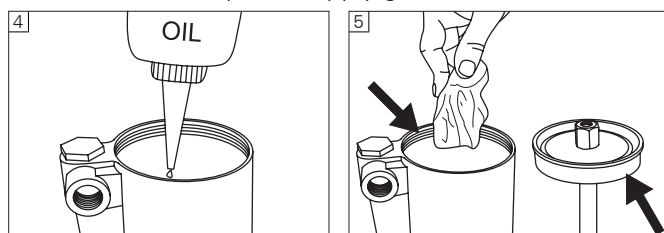


8. Reassemble the riveter by following the disassembly procedure in reverse.

### Clean & Maintenance for the Head of Riveter

1. Disconnect air hose.
2. Use spanner to take apart the head as fig 1.
3. Use spanner to take apart the part as fi. 2
4. Clean all the part and inside of the head as fig. 3.

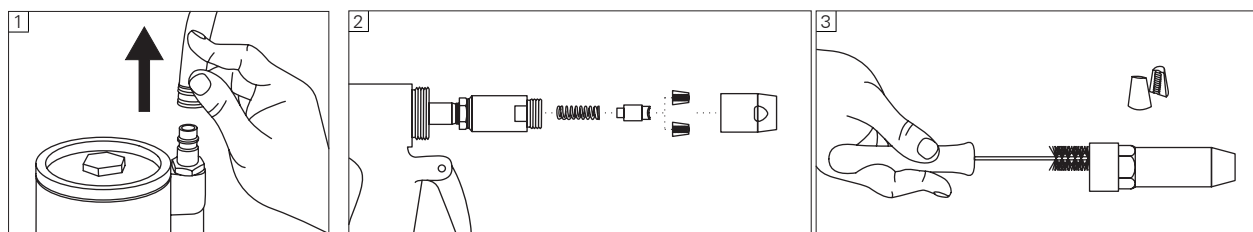

5. Apply lubricate oil as fig. 4.
6. Check the length as fig. 5.

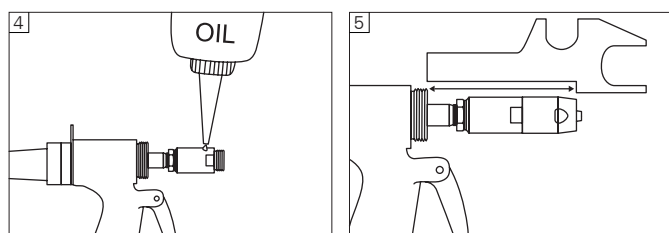

7. Reassemble the Head of Riveter by following the disassembly procedure in reverse.